


## To Mount the E-Z OFF

1. Cut the track off about six inches short of the point at which the trolley hook is to be lowered. Be sure the end of the track is "square".
2. Be sure that not less than 3 1/2 inches of track extends beyond the last track hanger.
3. Bolt another hanger to either side of the **E-Z OFF** frame at its far end (near the control lever pivot).
4. Position **E-Z OFF** at the end of the track so that the top of the chain pivot is flush with the top of the track. (See drawing.) Clamp the **E-Z OFF** in this position while you bolt the **E-Z OFF** hanger to the ceiling.
5. Using the two holes in the end of the **E-Z OFF** frame as a guide, drill matching holes in the track and bolt the frame to the track.
6. Attach the control lever to the **E-Z OFF**. (Use holes marked R for right hand models, L for left hand models.)



## E-Z OFF Installation Dimensions

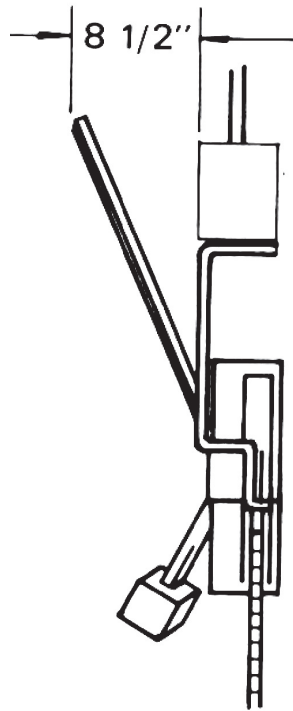